



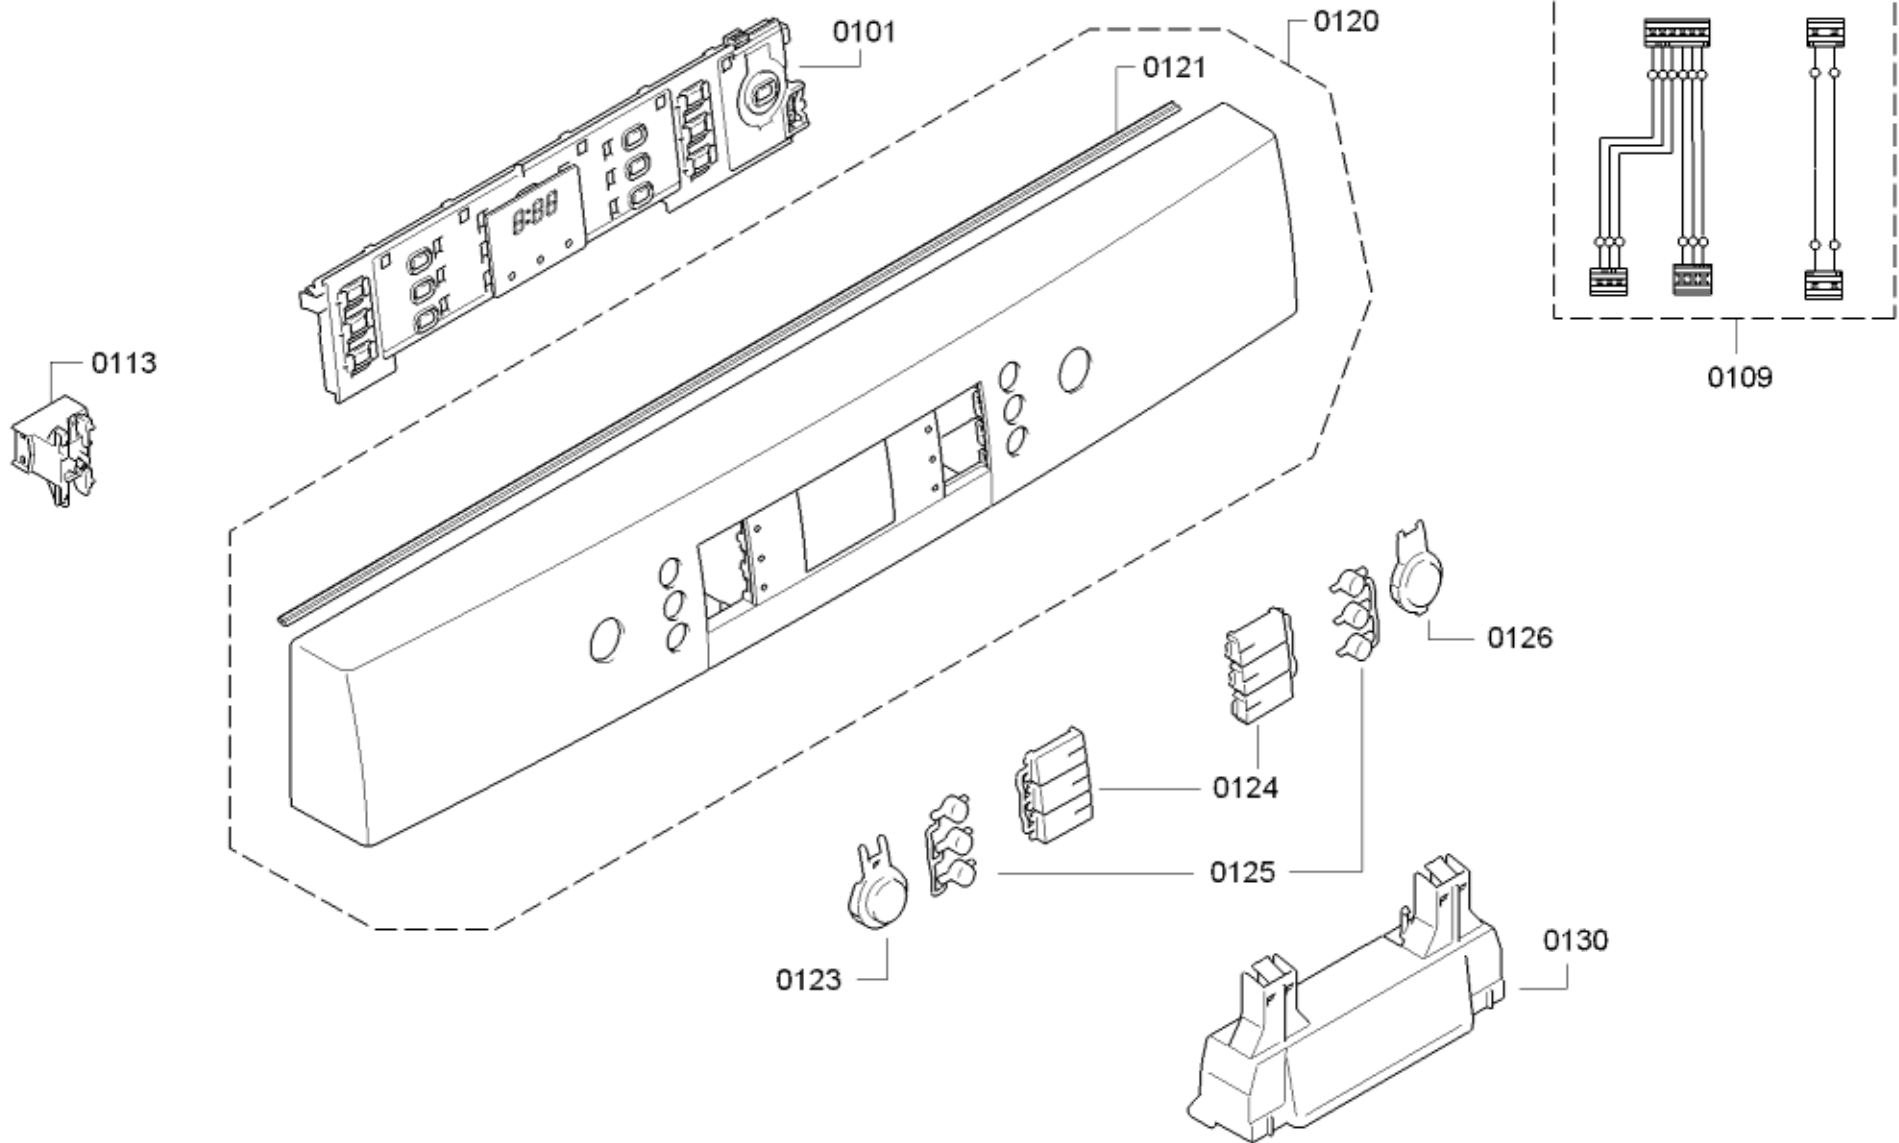


0199




Position ID	Spare part no.	Replacement	Description
0101	00708115	11008756	Operating module
0109	00645125		Cable
0113	00620775		Switch
0121	00668073		Sealing
0123	00615512		Key
0125	00615526		Push button set
0126	00615519		Key
0130	00645201		Handle
0199	00341333		Plexiglass door
0199	00341805		Auxiliary tool
0199	00708086		Rail
0199	00753465	12012342	Repair set-condensate
8100	00622456		Fixing kit
8101	00653419	00657927	Cover
8102	00428216		Filter-micro
8400	00543121		Installation instructions
8401	00564459		Supplemental

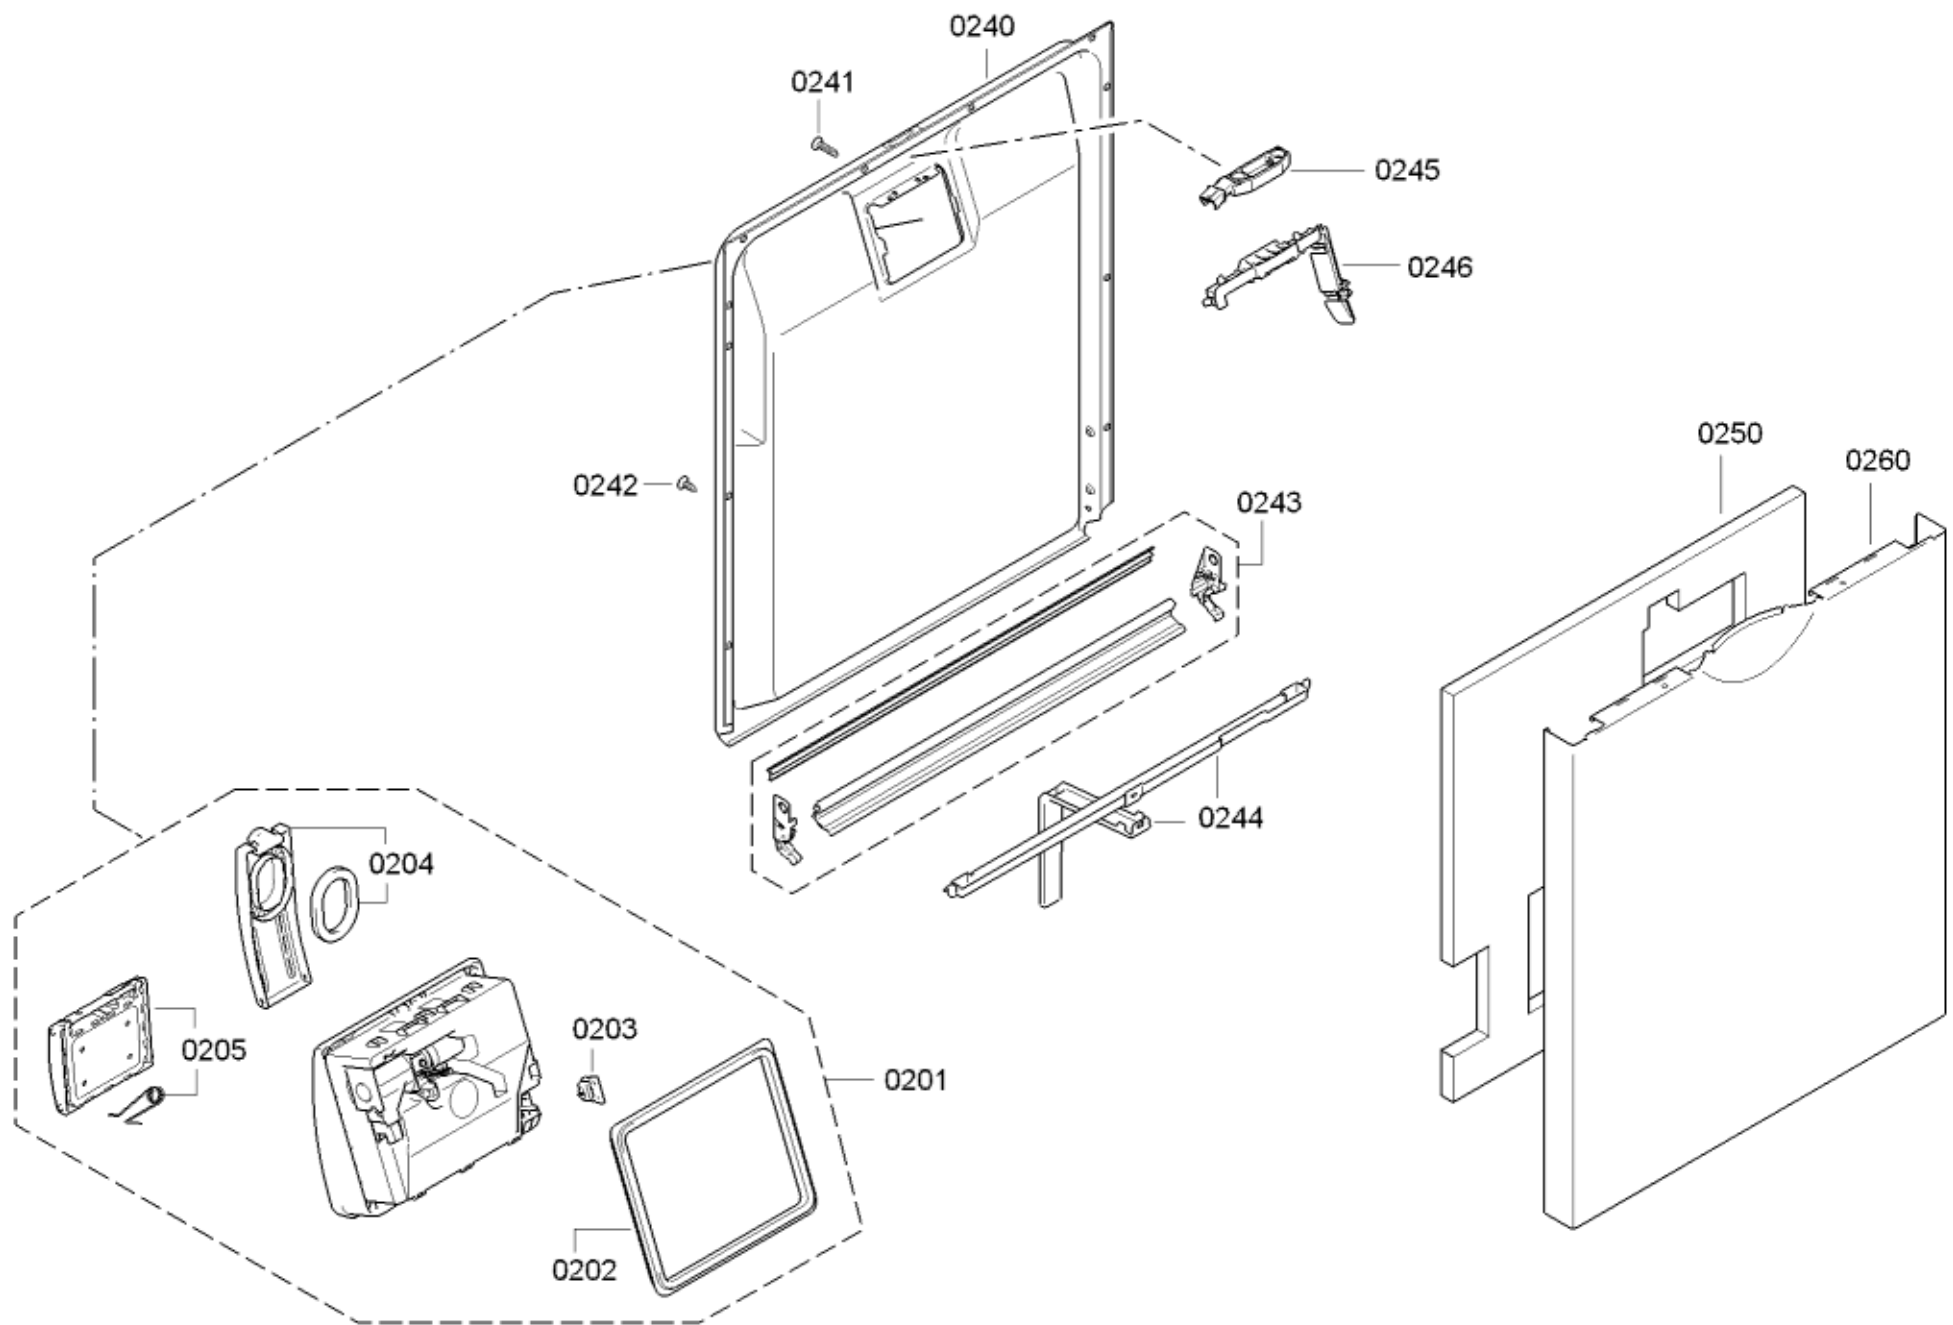

Position ID	Spare part no.	Replacement	Description
0201	00645026		Dispenser
0202	00645144		Sealing
0203	00611574		Sensor
0204	00611575		Lid
0205	00611576		Lid
0240	00680311		Door-inner
0241	00611311		Screw
0242	00151703		Screw
0243	00668079		Seal-door
0244	00668081		Overflow
0245	00629579		Sensor
0250	00680312		Insulating plate
0260	00680453		Door-outer
8100	00622456		Fixing kit
8101	00653419	00657927	Cover
8102	00428216		Filter-micro
8400	00543121		Installation instructions
8401	00564459		Supplemental

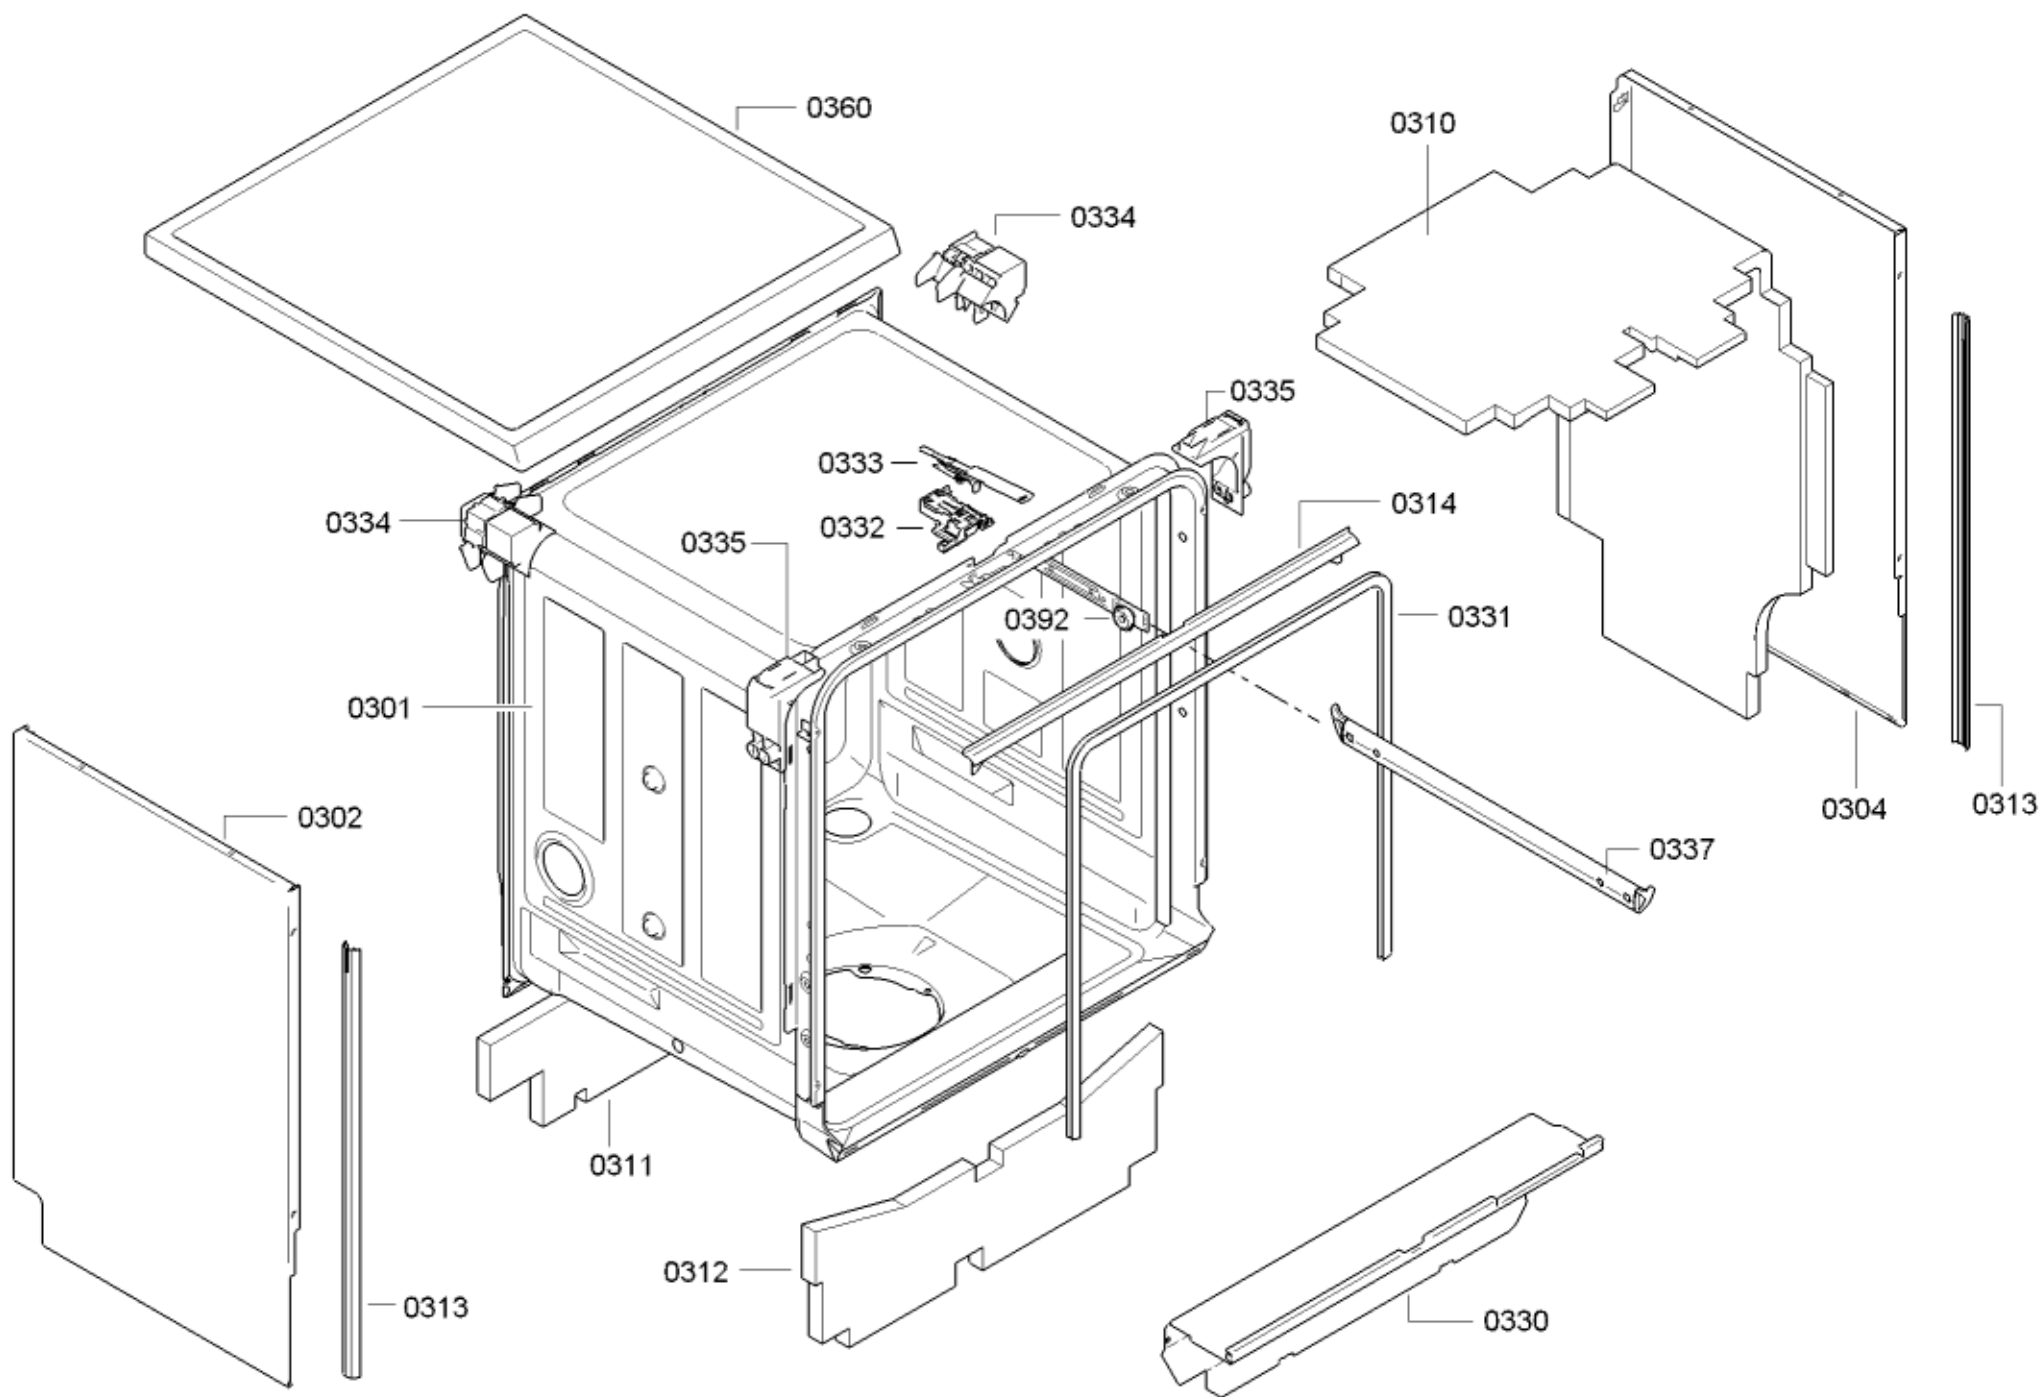


Position ID	Spare part no.	Replacement	Description
0302	00687145		Panel side
0304	00687146		Panel side
0310	00680316	00680915	Insulating plate
0311	00552829		Part not included in this appliance
0312	00552829		Part not included in this appliance
0313	00668094		Strip
0314	00668095		Strip
0330	00668096		Base
0331	00263096		Seal-door
0332	00629580	10006917	Lock
0333	00657677		Child-protection
0334	00623534		Holder
0335	00622874		Holder
0337	00668097		Rail
0360	00686309		Desk top
0392	00622193		Repair set-role
8100	00622456		Fixing kit
8101	00653419	00657927	Cover
8102	00428216		Filter-micro
8400	00543121		Installation instructions
8401	00564459		Supplemental

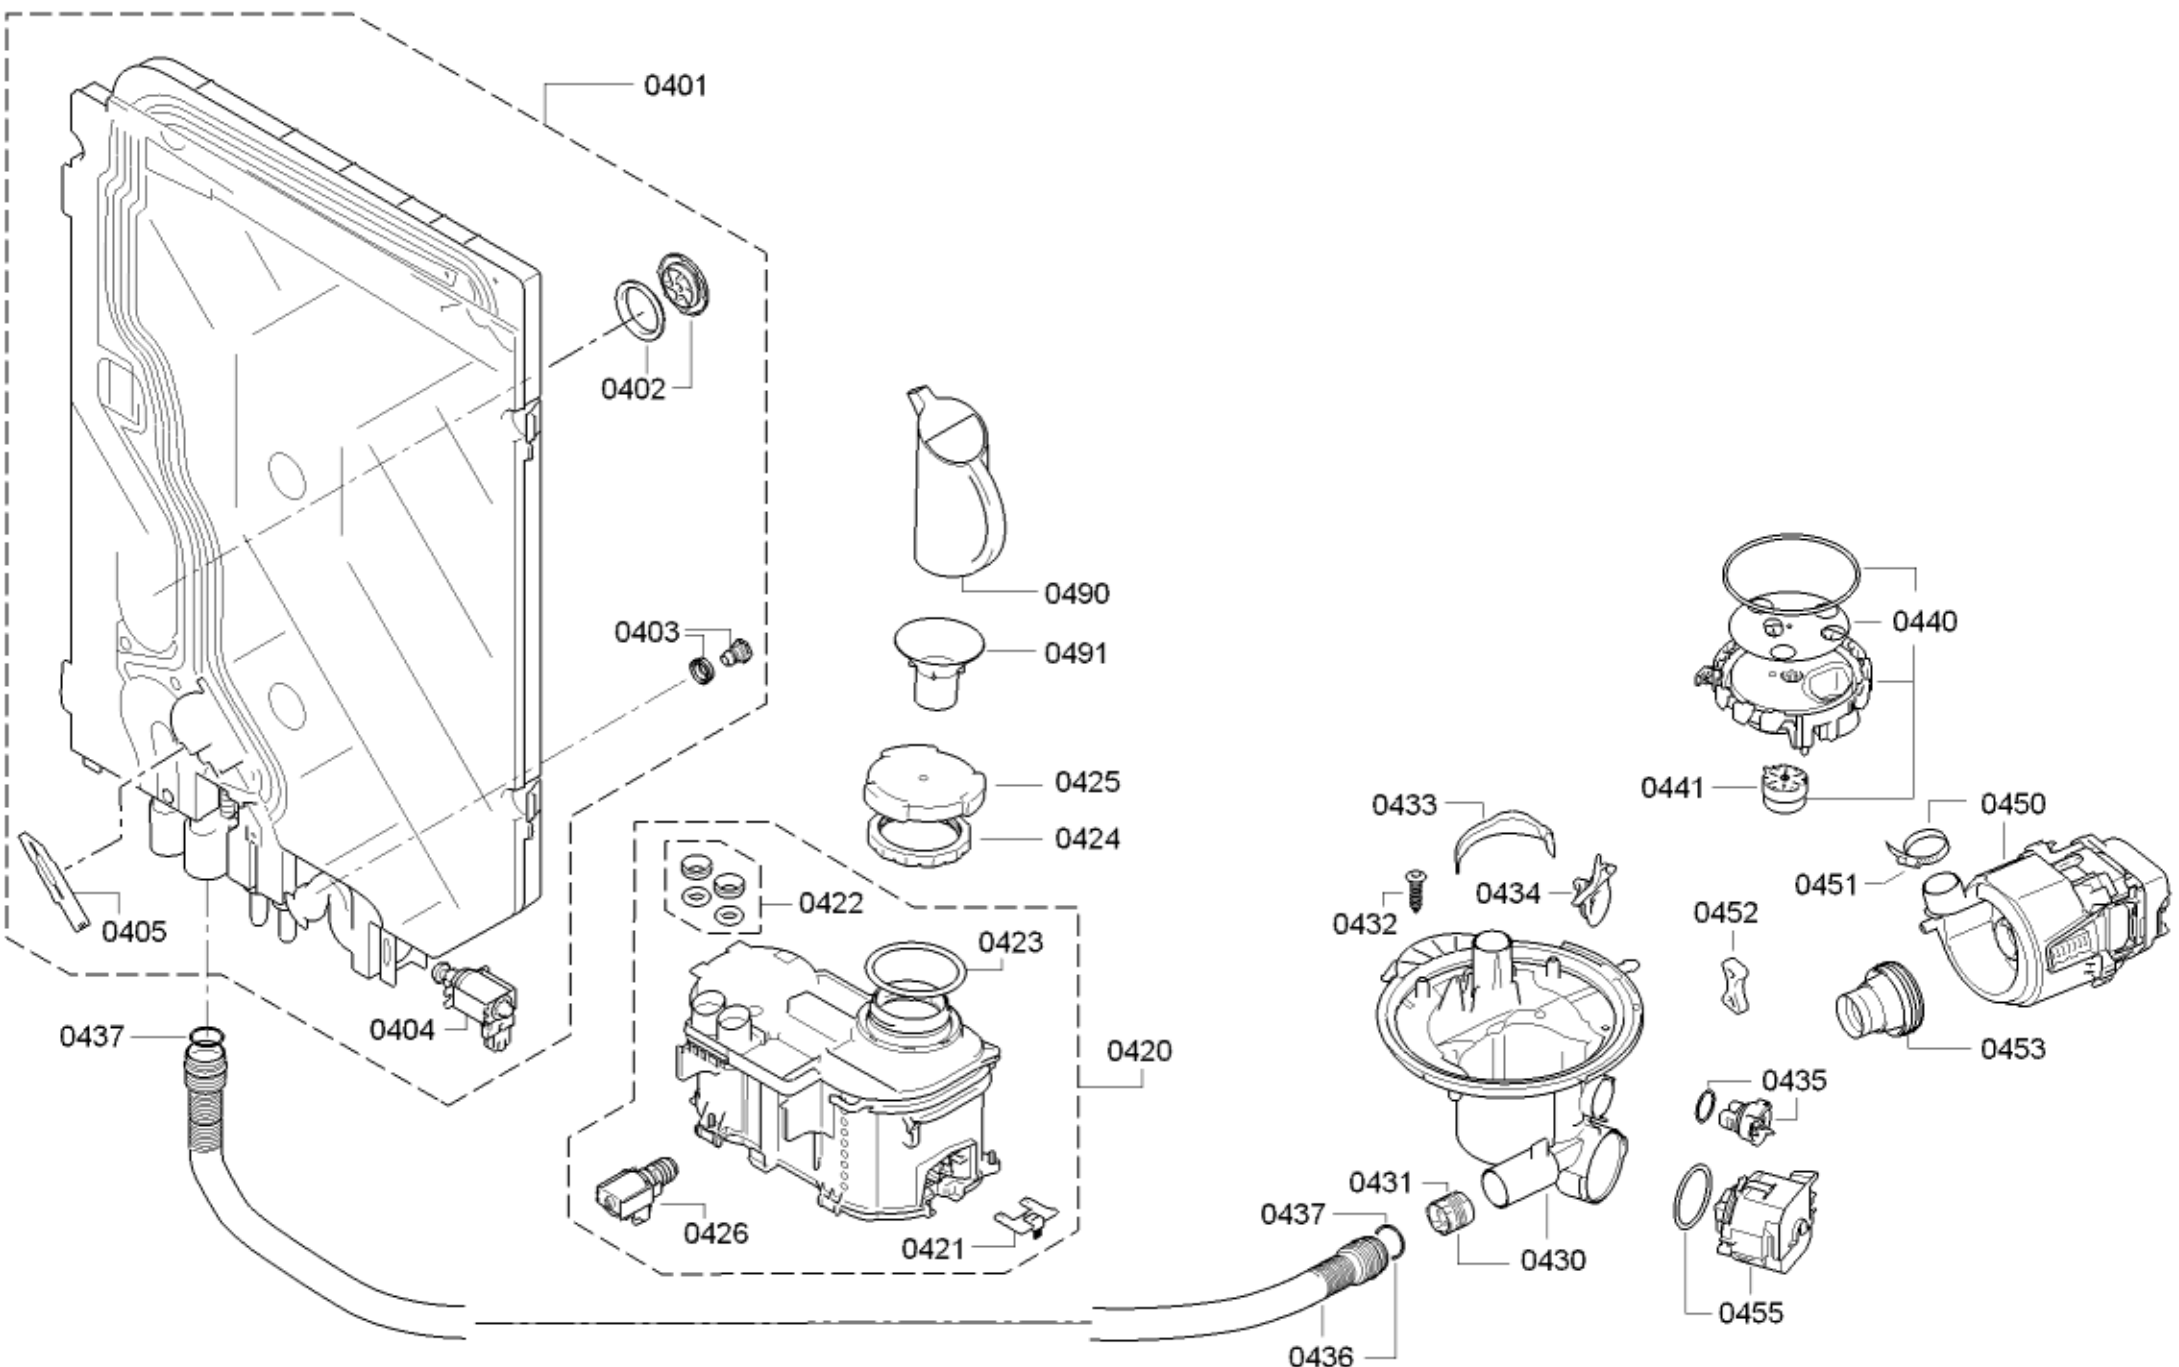


Position ID	Spare part no.	Replacement	Description
0401	00687133		Heat exchanger
0402	00623541		Cover
0403	00622267		Thread bolt
0404	00611316		Valve-outlet
0405	00611317		Contact
0420	00645025	12023291	Water softener
0421	00611912		Sensor
0422	00611913		Sealing
0423	00611915		Sealing
0424	00611318		Nut
0425	00611319		Lid
0426	00611916		Valve-regeneration
0431	00611320		Valve-non return
0432	00167241		Screw
0433	00611321		Cover
0434	00611322		Lid
0435	00611323		Sensor
0436	00668104		Hose
0437	00611324		Sealing
0440	00644996		Altern.water distributor
0441	00611329		Water switch motor
0450	00651956		Heat pump
0451	00172272		Hose clamp
0452	00611330		Suspension
0453	00611331		Sealing
0455	00620774		Pump-drain
0490	00552829		Part not included in this appliance

0491	00552829		Part not included in this appliance
8100	00622456		Fixing kit
8101	00653419	00657927	Cover
8102	00428216		Filter-micro
8400	00543121		Installation instructions
8401	00564459		Supplemental

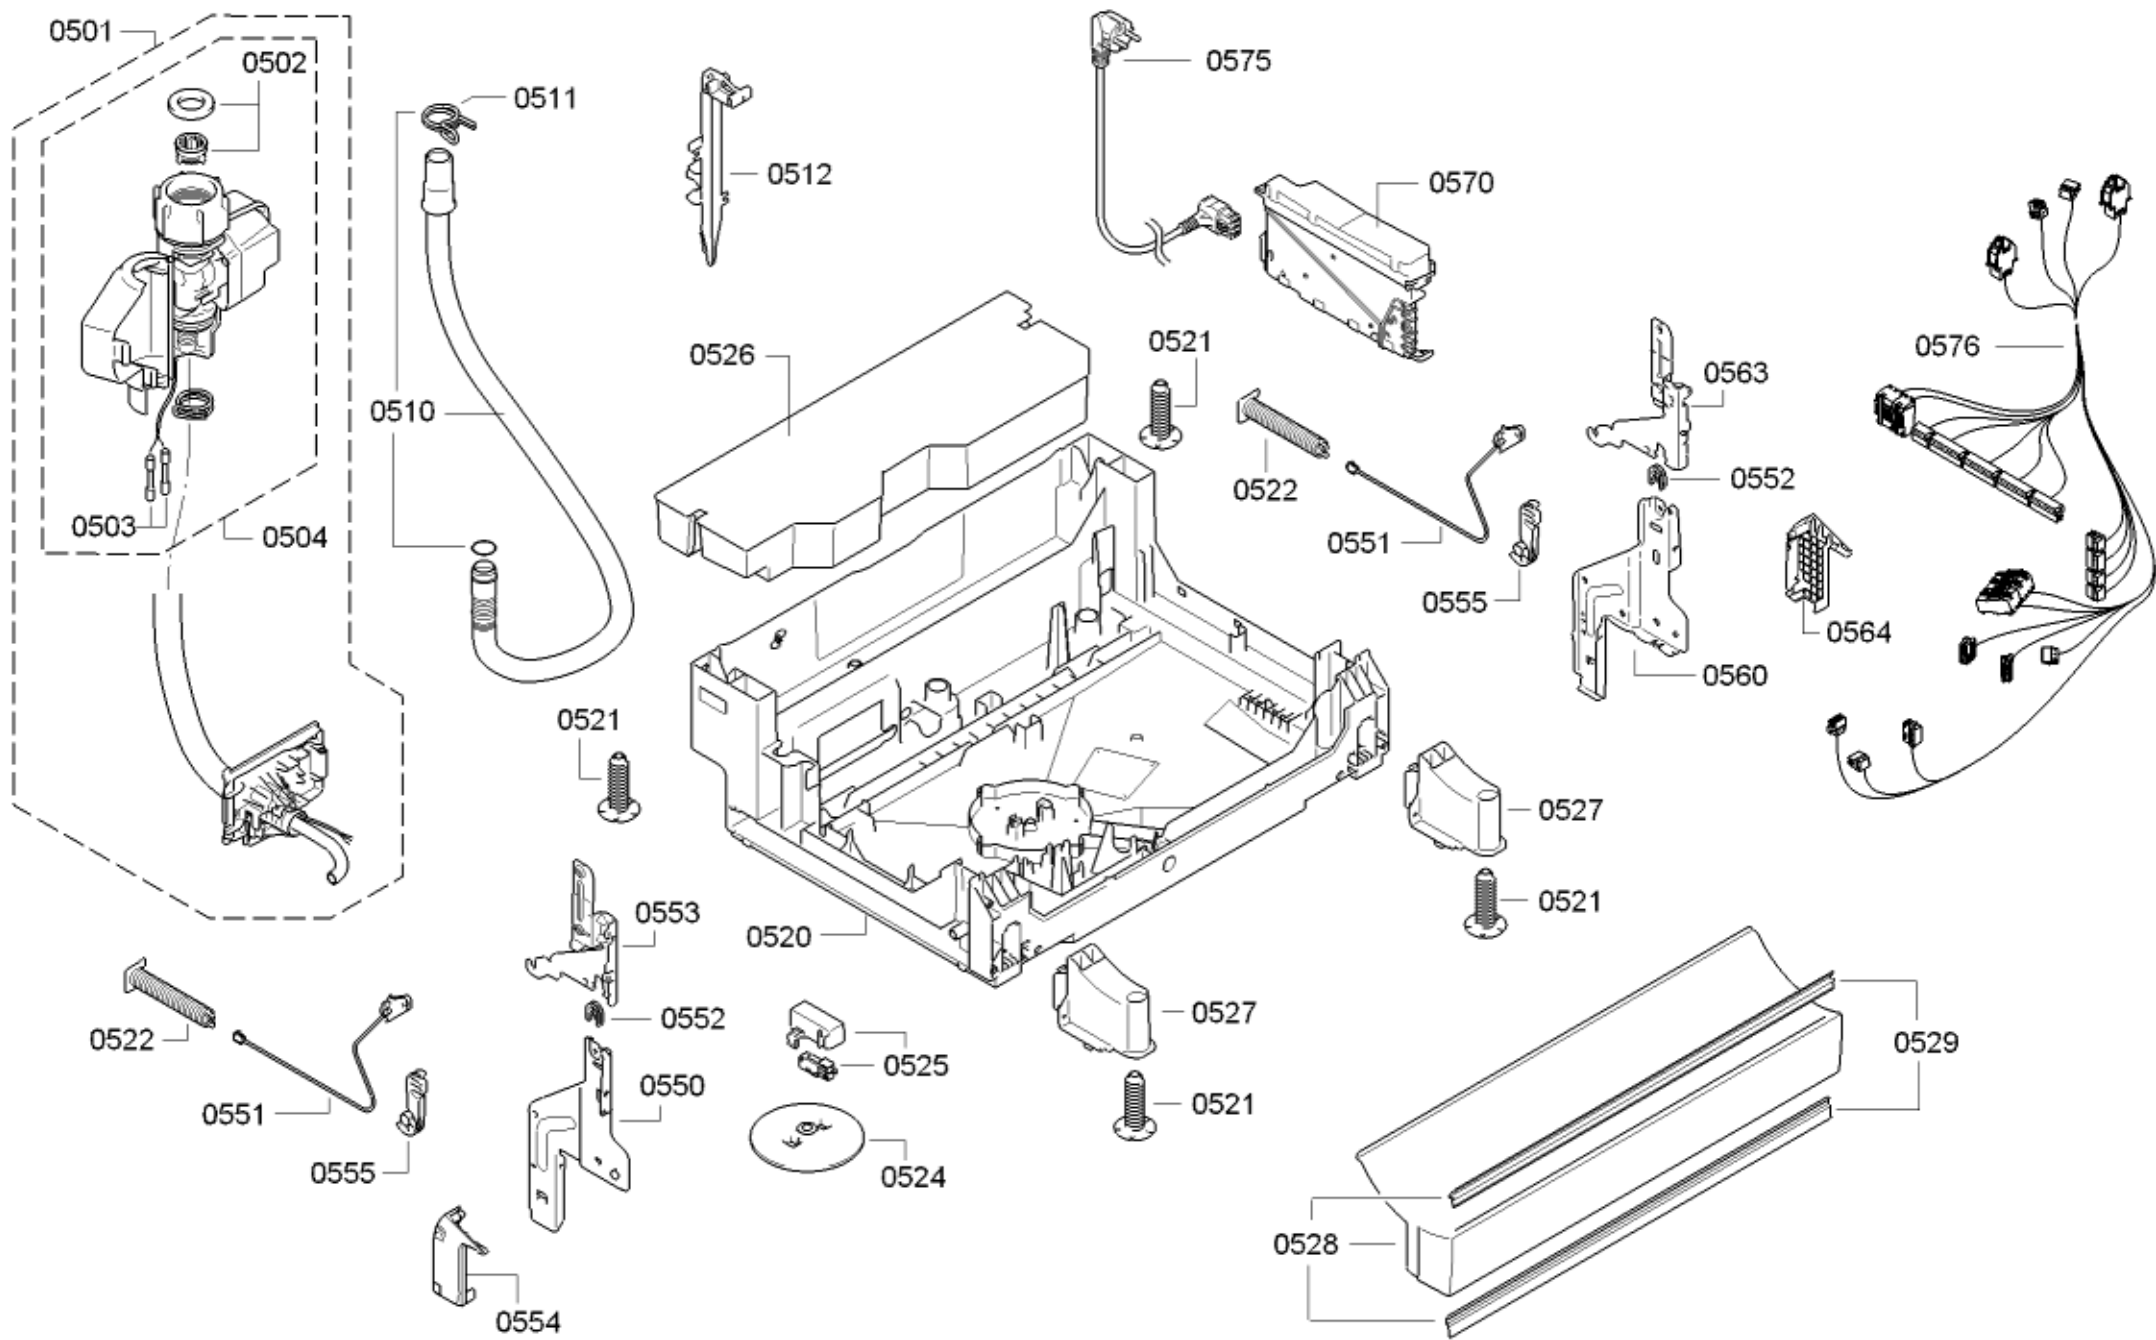

Position ID	Spare part no.	Replacement	Description
0501	00668113		Aquastop
0501	00673684		Aquastop
0502	00166671		Sealing
0503	00067776		Cable connector
0504	00645701		Valve-aquastop
0510	00668114		Drain hose
0511	00417499		Hose clamp
0512	00644991		Holder
0521	00609843		Foot
0524	00622036		Float
0525	00622035		Switch
0526	00144854		Weight
0527	00611344		Support
0528	00680457		Panel-base
0529	00611345		Sealing
0550	00741883		Hinge-plate
0552	00165296		Bearing
0553	00645027	12005776	Hinge
0554	00626594	00636331	Cover
0555	00623536		Guide
0560	00741885		Hinge-plate
0563	00645029	12005775	Hinge
0564	00626595	00636332	Cover
0570	00655487		Power module not programmed
0570	00656397		Power module programmed
0575	00646104		Power cord
0576	00657884		Cable harness

8100	00622456		Fixing kit
8101	00653419	00657927	Cover
8102	00428216		Filter-micro
8400	00543121		Installation instructions
8401	00564459		Supplemental
0522	00611335		Spring
0551	00611370		Rope
0520	00770936	00773695	Case-bottom

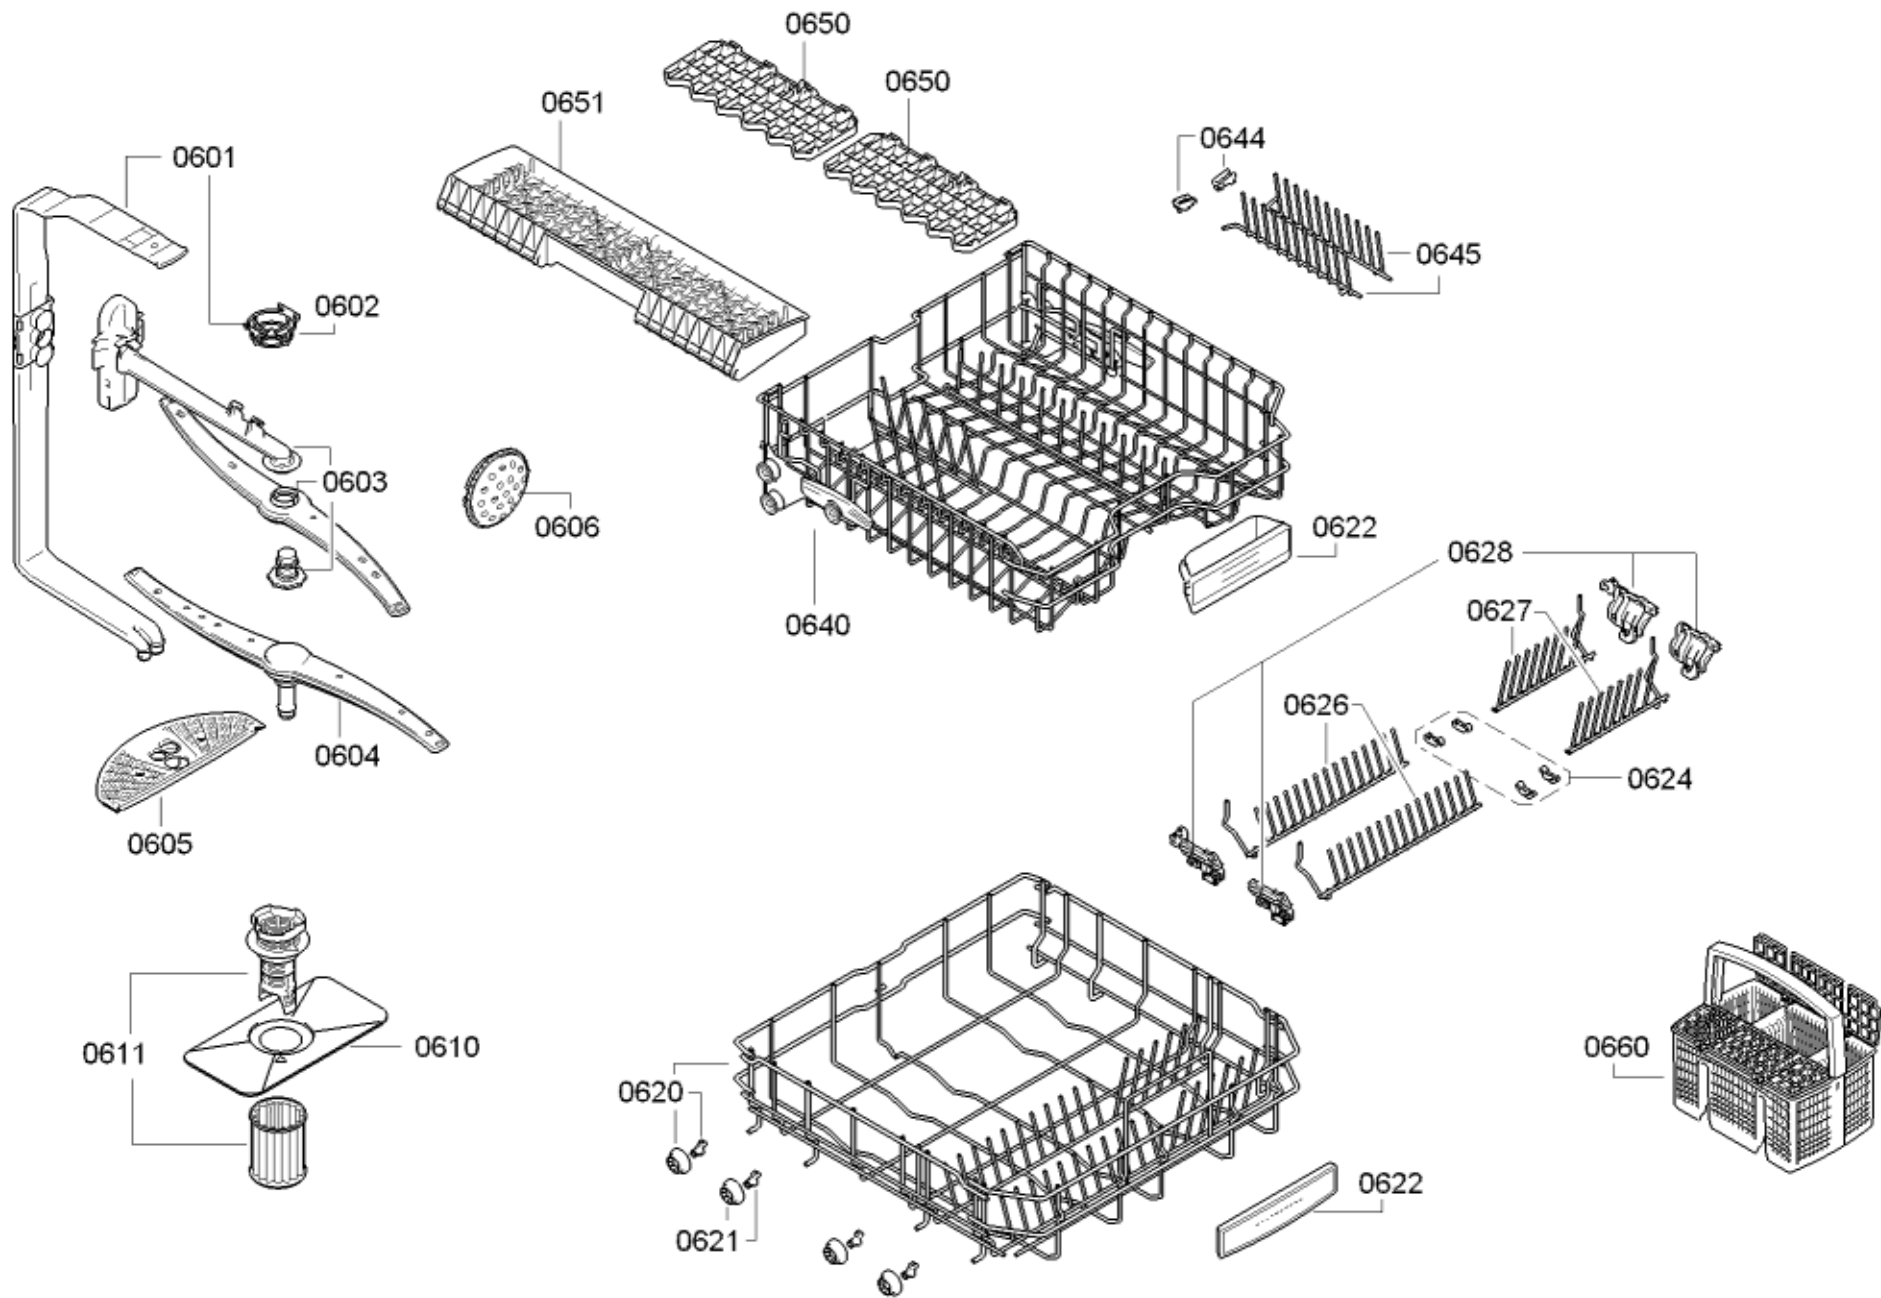

Position ID	Spare part no.	Replacement	Description
0601	00668143	11003118	Tube
0602	00611388		Shower
0603	00668147	11012631	Spray arm
0604	00668148		Spray arm
0605	00645036		Cover
0606	00612114		Spray head
0610	00645037		Filter-fine
0611	00645038		Filter-micro
0620	00680381	00771609	Crockery basket
0621	00611475		Dishwasher rack wheel
0622	00616395		Handle
0624	00611472		Clip
0626	00645101		Insert
0627	00645102		Insert
0628	00611473		Bearing
0640	00680383	00777333	Crockery basket
0644	00611474		Clip
0645	00645104	12004140	Insert
0650	00645155		Cup rack
0651	00701353		Insert
0660	00668270	11018806	Cutlery basket
8100	00622456		Fixing kit
8101	00653419	00657927	Cover
8102	00428216		Filter-micro
8400	00543121		Installation instructions
8401	00564459		Supplemental